

USER MANUAL

Analog to Digital Audio Converter

Enjoy the vivid world !

INTRODUCTION

Dear customer:

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

This Analog to Digital Audio Converter is designed for home or professional audio switching. It can convert analog L/R audio signal to Coaxial or Toslink digital audio signal. At the same time, it can connect to an amplifier via standard RCA-style jacks.

Our devices offer solutions for noise, space and security concerns, data center control, information distribution, conference room presentation, school and corporate training environments.




Features:

- Convert analog L/R audio signal to Coaxial or Toslink digital audio signal
- Support 3.5mm audio and RCA audio input
- Support sample rate: 96 KHz
- R/L channel of S/PDIF is 24 bit
- Support electromagnetic-noise-free transmission
- Easy to install and simple to operate

Specifications:

Input Audio.....	L/R analog audio
Output Audio.....	Coaxial or Toslink digital audio
Input audio connector.....	2xRCA(L/R), 3.5mm audio
Output audio connector.....	Toslink, 1XRCA(Coaxial)
Sample rate.....	96 KHz
Max working current.....	250mA
Power adapter format.....	AC (50Hz, 60Hz) 100V-240V; DC 5V/300mA
Operating Temperature range.....	(-15 C to +55 C)
Working humidity range.....	5% to 90%RH (No Condensation)
Dimension (L x W x H).....	45x48x20(mm)
Weight.....	62g

Physical Connection Showing Picture:

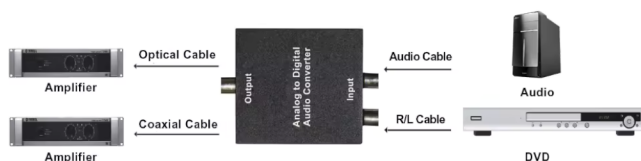

The Package includes:

1. Analog to Digital audio converter
2. Charging cable
3. User manual

Notes:

Pls use the machine as the instruction listed to keep the long use lifetime of the machine.

1. The machine should be placed at the spot far from the Damp, High-Temperature, Dusty, Erosive, and oxidative environment.
2. All parts will be free from the strong shake, hit, fall.
3. Touching the power adaptor with the wet hands is prohibited.
4. Pls hold the power adaptor head and do not pull the power cord when cut off from the Socket.
5. Pls turn the power off when the machine is not used (Pls unplug the power adaptor head When the machine is not used for long time).
6. Pls do not open the cover and do not touch the inside parts.
7. Pls use the original factory power adaptor.

Before power on, pls check the connection line carefully. And make sure that all interfaces are normally connected. The common trouble shooting way shows below:

Serial NO	Trouble Description	Cause and Ways to deal with
1	Non-Power-Connected	<ol style="list-style-type: none"> 1. Check if the power adaptor head is truly and correctly inserted the power socket. 2. Check the power switch if it is in on status.
2	No Picture	<ol style="list-style-type: none"> 1. Pls to make sure that the TV is on and has been connected with the machine. 2. To check if the signal source is on and well connected. 3. Check the system connection quality. 4. Check if the line is all good quality. 5. Check the cable quality (HDMI cables must be conformed to the HDMI standard).
3	Obscure Picture	<ol style="list-style-type: none"> 1. To try again to connect the cable to be free from the unsuccessful connection. 2. HDMI Cable Quality (HDMI cables must be conformed to the HDMI standard).