




## **Instruction Manual**



#### Interface:

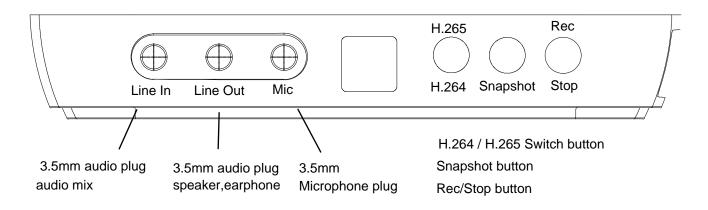

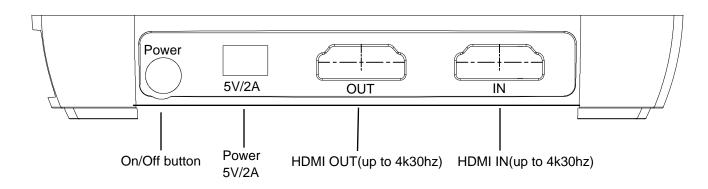

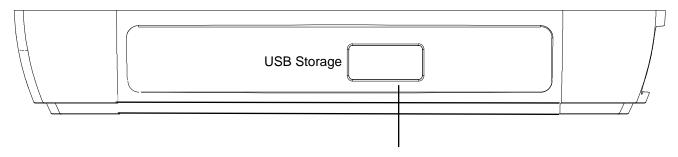

Supports USB pen drive( up to 256g FAT32 ,NTFS or exFat); Hard Disk(up to 8T FAT32 ,NTFS or exFat)

FAT32 format: 4G/file

NTFS & exFAT format :16G/file

#### Specifications:

Video input/output resolution up to : 4k30 ( capture any input resolution).

Input devices: Play Station 4pro, Xbox One & Xbox 360, Nintendo Switch & Wii U

Output: HDMI (pass-through) up to 4k30

Capture resolution: UHD: 4K30hz Max.

FHD: 1080p60, 1080p50 1080p30, 1080p25, 1080p24, etc.

HD: 720p60, 720p50, etc.

Capture format: H.264 /H.265 / AAC/MP4 (hardware encoding)


Sampling rate: 48kHz PCM

Button mode:H.264/H.265, screenshot, record / stop LED (logo): green for 4K recording/ below 4k is blue LED (side ring): blue for H.264 / green for H.265

H264 is compressed, the video bit rate is set to UHD 16Mbps, FHD 12Mbps, HD 8Mpbs, SD 4Mbps.

H265 is compressed, the video bit rate is set to UHD 12Mbps, FHD,HD 8Mbps, SD 4Mbps.

Screenshot format: JPG

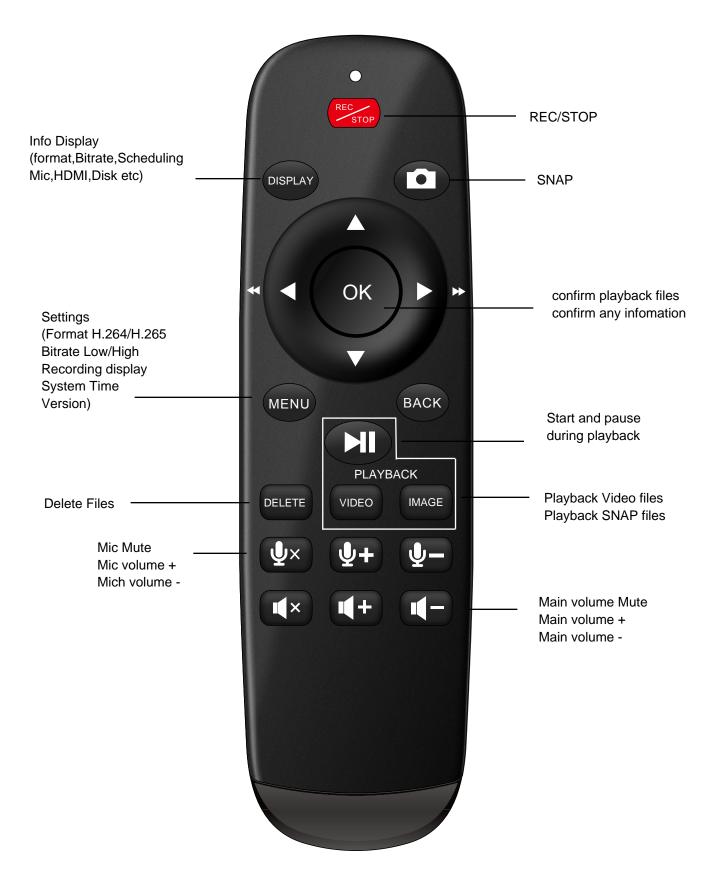

### Product function and more tips:



Supports USB Disk( up to 256g FAT32 ,NTFS or exFat; Hard Disk(up to 8T FAT32 ,NTFS or exFat)

LED (side ring): green for H.265/ blue for H.264



LED (top cover): blue for FHD and below/ green for 4k recording







Device is recording



# Snapshot

- 1. Screenshot during recording
- 2. Screenshot during preview



### No storage device found

- 1. When no USB disk or Hard disk is inserted.
- 2. There is a problem with the USB disk or hard disk.

### Not enough space available


When there is not enough space for the storage.





### Unsupported resolution

The input resolution is incorrect. please check the input resolution of the device

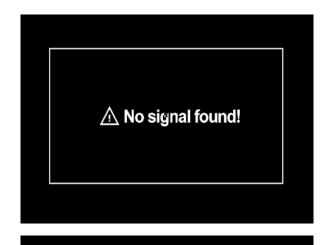

No signal detected




HDCP video is not supported



The input resolution is incorrect. please check the input resolution of the device

# Not support compressed audio

- 1. Only supports stereo input (HDMI INPUT)
- 2. Not support 5.1, 7.1 channels

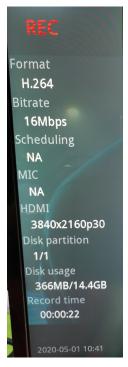










Waiting

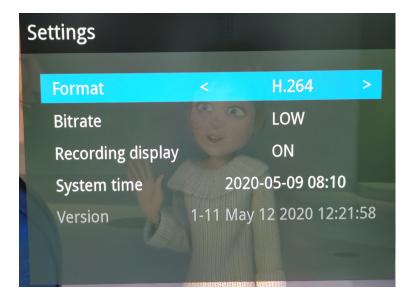




Format (H.264 or H.265)

Bitrate( LOW or HIGH)

Recording Display (ON or OFF)

System Time

Version

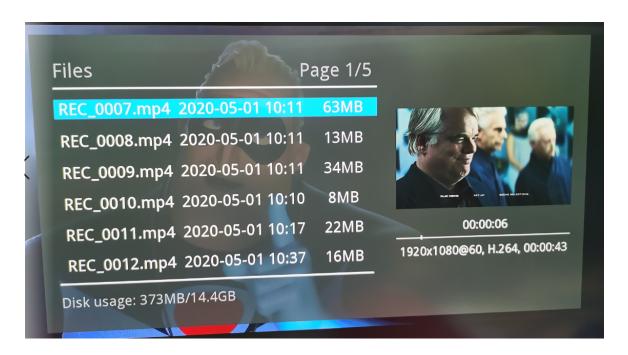



Use the VIDEO button for playback video

Select the files small screen to watch press the OK button to watch on the large screen



Start and pause during playback





Use the IMAGE button for playback jpg

Select the files small screen to watch press the OK button to watch on the large screen



Start and pause during playback