





Interface

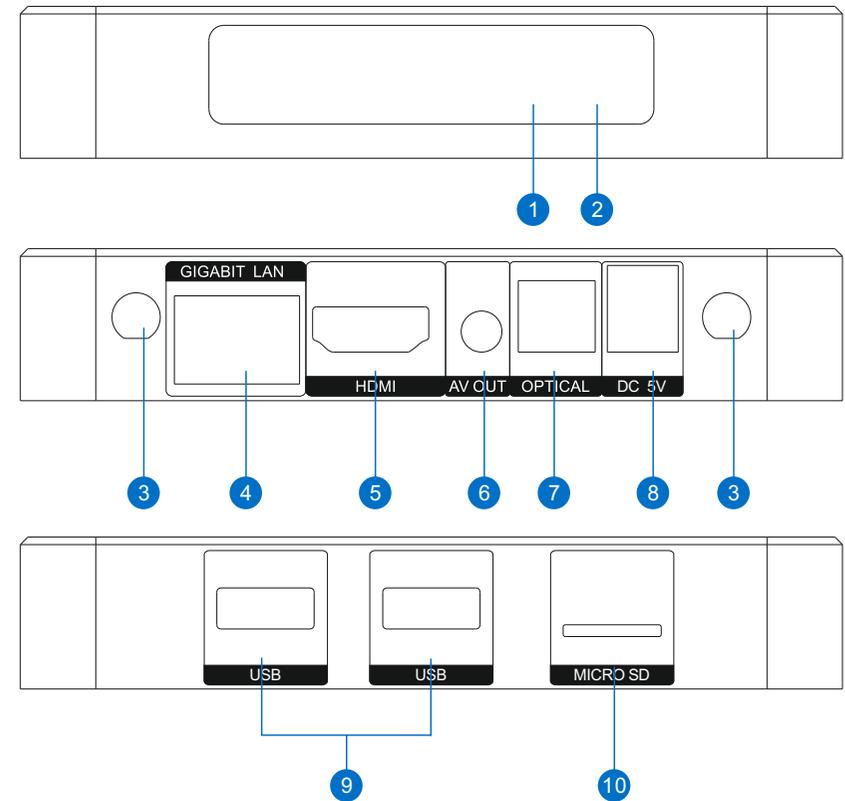

1. IR-eye
2. LED indicator
3. Wi-Fi antenna port
4. Ethernet 10/100/1000
5. HDMI 2.0a output
6. A/V output (composite video + analog stereo audio)
7. Optical S/PDIF
8. 5V DC IN
9. 2 x USB 2.0 host
10. Micro SD card slot

www.dune-hd.com
support@dune-hd.com


Package content

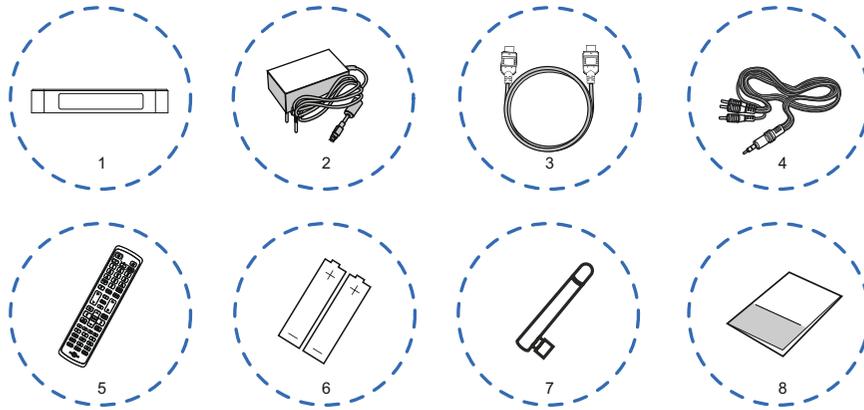


1. Dune HD player
2. Power supply
3. HDMI cable
4. AV cable (3.5mm minijack to 3 xRCA)
5. Remote control
6. 2 x AAA batteries
7. 2 x Wi-Fi antennas
8. User manual

Installation



1. Connect your Dune HD Player to TV by HDMI-cable
2. Connect the power adaptor

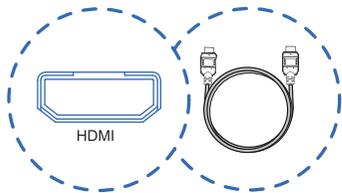

2. Connect the power adaptor

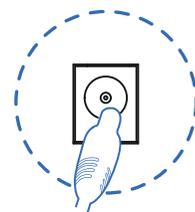

3. Use Ethernet-cable (not included) to connect Dune HD player to the Internet (or use Wi-Fi)
4. Turn on the Dune HD player and TV. Choose the proper input on the TV.

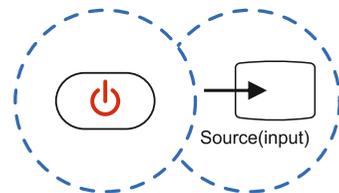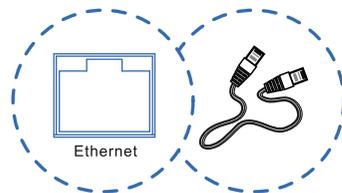

Remote control

- TV section (POWER, DOWN, UP, INPUT) — learnable buttons to control TV or other external equipment. See "Learning Remote Control" section for more information.
- POWER — turn the player on/off.
- 0-9 — enter numbers and text; control some other player functions.
- CLEAR — delete the last entered character, delete the currently selected item, control some other player functions.
- SELECT — switch text input mode, add the item to the selection list, control some other player functions.
- MUTE — turn the sound on/off.
- RECENT — switch to recently watched channels/movies or other recent items.
- SETUP — enter/leave the setup menu; adjust playback settings during playback.
- V+/V- (volume up / volume down) — adjust the volume.
- MOUSE — toggle virtual mouse (if available).
- MOVIES, TV — hot keys to quickly access TV channels / Movies functionality (when available).
- P+/P- (page up / page down) — scroll up and down in various lists, switch to the next/previous TV channel, control some other player functions.

- Arrows ◀▶▲▼, ENTER, RETURN, TOP MENU, POP UP MENU, INFO — main buttons for controlling the player (navigate across the items on the screen, open/use the currently selected item, go back to the previous screen, go to the main menu, show/hide popup menu with actions for the currently selected item or the current player state, show/hide information about the currently selected item or the current player state, control some other player functions).
- A (Red), B (Green), C (Yellow), D (Blue) — control various player functions.
- ▶ (PLAY), || (PAUSE), STOP, >>| (NEXT), |<< (PREV), >> (FWD), << (REW), REC, ZOOM, SUBTITLE, MODE, AUDIO — control the playback and some other player functions.

Learning remote control

The TV section on the remote control has 4 learnable buttons (POWER, DOWN, UP, INPUT), which can be programmed to control your TV or other equipment. Buttons are learned by IR signals from another IR remote control.

To program these buttons, perform the following steps:

1. Press and hold "SETUP" button on your RC during 3 seconds. The LED indicator near the "POWER" button on your RC will light up. This means that your RC has entered into the learning mode.
2. Press a button on your RC (one of 4 learnable buttons in the TV section). The LED indicator on your RC will start blinking. This means that your RC is ready to learn this button.
3. Put the IR emitter of the other RC in 1 cm opposite to the IR receiver of your RC.
4. Press and hold a button on the other RC during 1 second. The LED indicator on your RC will quickly blink 3 times. This means that your RC has learned the IR signal of this button and programmed the chosen button on your RC to generate the learned IR signal.
5. Learn other buttons of your RC the same way if needed (repeat steps 2, 3, 4).
6. Press the "SETUP" button on your RC again to exit the learning mode.

To reset RC settings to factory defaults, press and hold the buttons "SETUP" and "CLEAR" on your RC during 3 seconds. The LED indicator on your RC will blink 5 times.

