

H.264 HD HDMI Encoder for IP TV

Operation Instructions



Table of Contents

1. Features.....	3
2. Package Contents.....	3
3. Hardware Description	4
4. Typical Application	4
5. Environment Configuration	5
5.1. Software	5
5.1.1. Change the IP Address of PC	5
5.1.2. Login for configuration.....	6
5.1.3. Check the stream address	6
6. Encoder Setting	6
6.1. Encoder Setting.....	6
6.2. Audio Setting.....	7
6.3. Advanced	7
7. OSD Setting.....	8
7.1. Stream OSD Setting.....	8
7.2. LOGO Uploading.....	8
8. System Setting.....	9
8.1. Network	9
8.2. Change password	9
8.3. Reset.....	10
8.4. Reboot	10
9. Application	11
9.1. User Application Example	11
9.1.1. Web Video Preview	11
9.1.2. VLC Play	12
9.2. Multi Local User Application Multicast Way	13
9.3. Local Surveillance System Application NVR Connction	14
9.4. Remote Multi User Application RTMP Connection.....	15
WARRANTY	15

Dear Customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.



1. FEATURES

- Support H.264 encoding.
- Support UDP, HTTP, RTSP, RTMP, ONVIF protocol.
- Support MPEG1 Audio Layer 2.
- CBR/VBR rate: 16Kbps~16Mbps.
- 1000M network interface uses full duplex mode.
- Support up to 720p, 1080p@60HZ HD video input.
- Support image parameter settings.
- WEB interface management authority.
- Support remote management in WAN (WEB).
- Support resolution customized settings.
- Support one key to restore the factory configuration.

2. PACKAGE CONTENTS

- 1). Main Unit. H.264 HD HDMI Encoder
- 2). 1x Power adapter DC 12V
- 3). Operating Instruction manual

3. HARDWARE DESCRIPTION

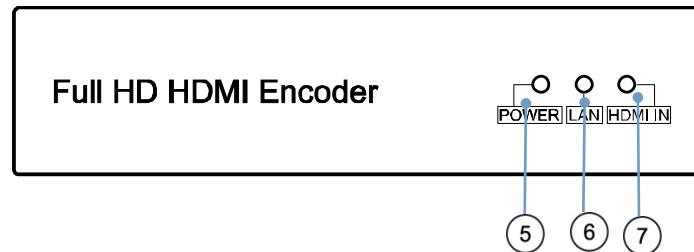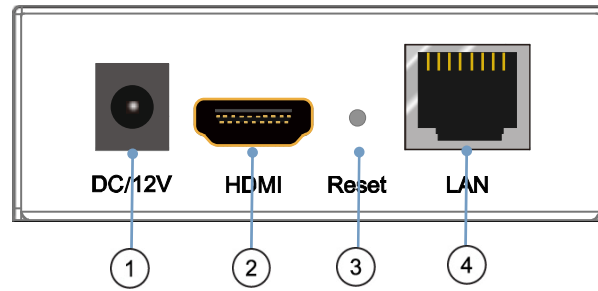

- ① Power input port
- ② HDMI input
- ③ Reset button **1**
- ④ LAN output **2**
- ⑤ Indicator of power input
- ⑥ Indicator of LAN output
- ⑦ Indicator of HDMI input

Note: **1**. Reset to the factory default setting: press “Reset” for 10 seconds till all three indicators go out.

2. LAN: default IP is 192.168.1.168 for the unit.

4. Typical Application




5. Environment Configuration

5.1 Software


5.1.1 Change the IP Address of PC

Assign the PC (or laptop) IP address on the computer: “Control Panel”→ “Network Connections”→ “Local Area Connections Status”→ “Properties”→ “Internet Protocol (TCP/IP)”→Type the IP address with 192.168.1.XX (0-255) and Subnet mask with 255.255.255.0. After that press OK to save the configuration.

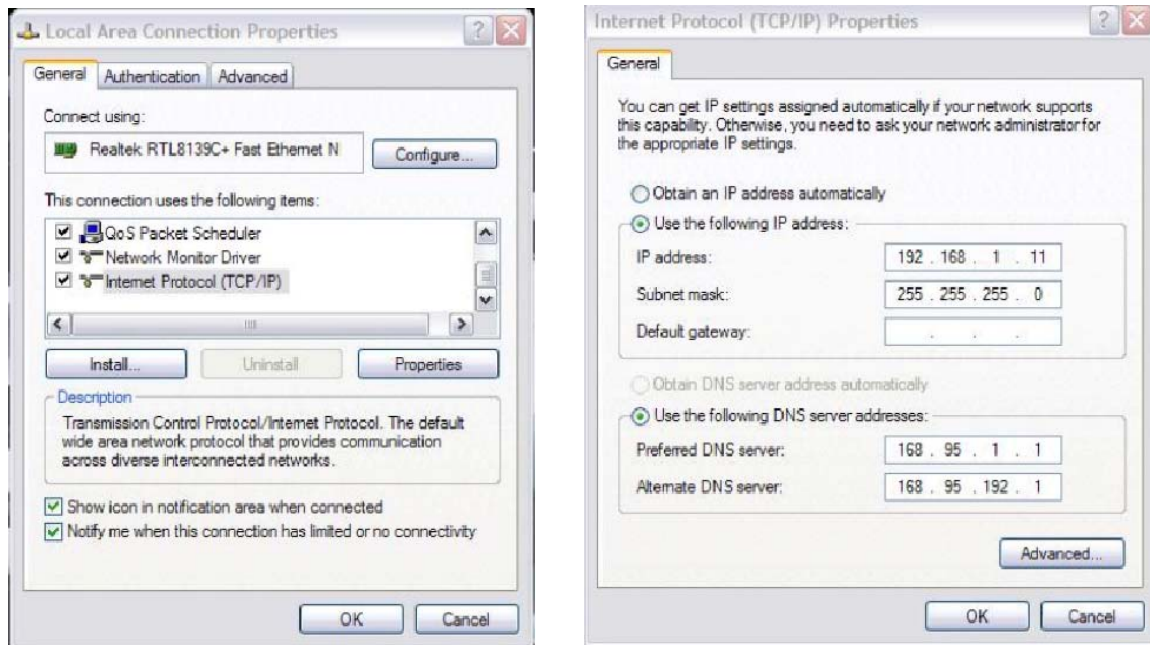


5.1.2 Login for configuration

Enter the unit IP 192.168.1.168 on browser, to open the web GUI. Login with default user name and pass word as admin. Like below, into the home page.

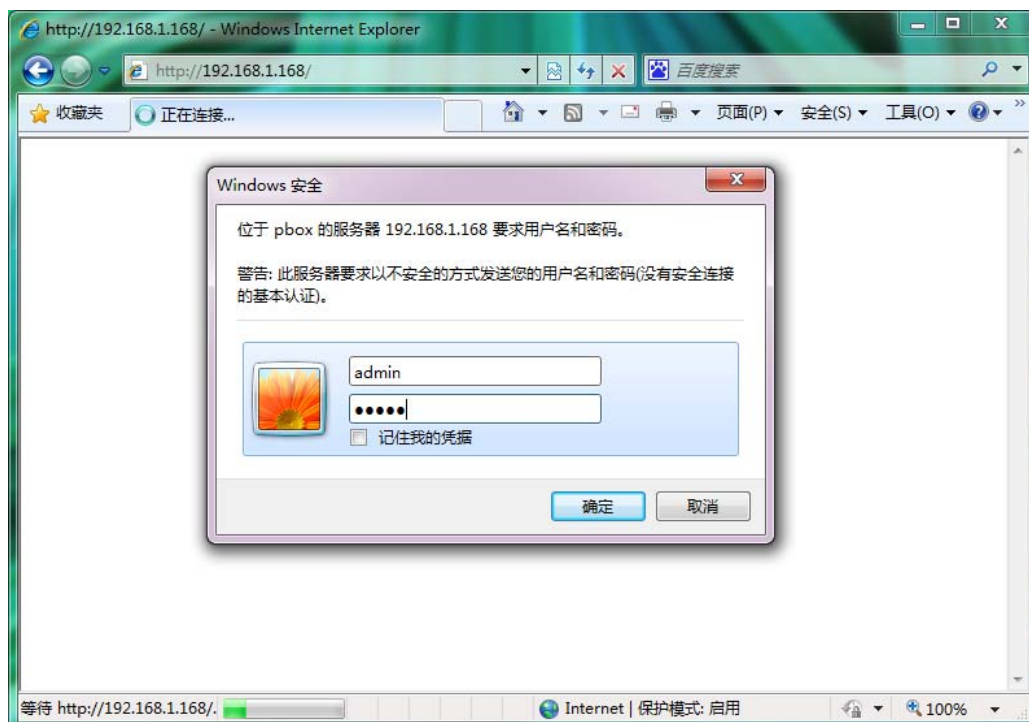

5.1.3 Check the stream address


As below, the stream address is in the red frame.

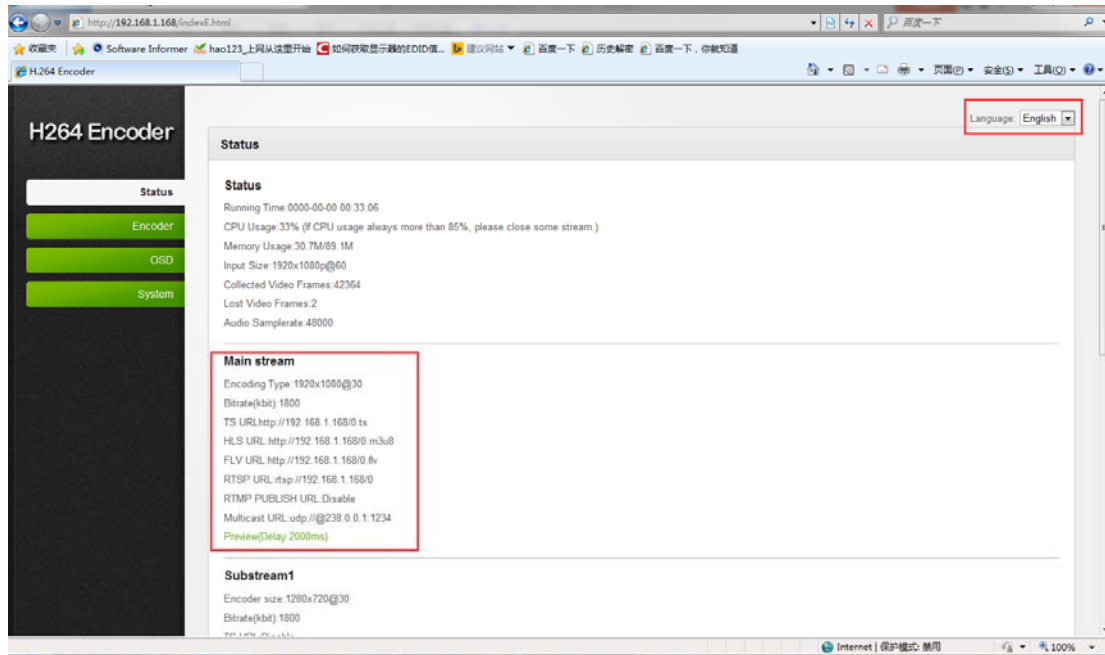

6. Encode Setting


6.1 Encode Setting

Click Encode setting → Main stream → Setting the parameters → Click Apply

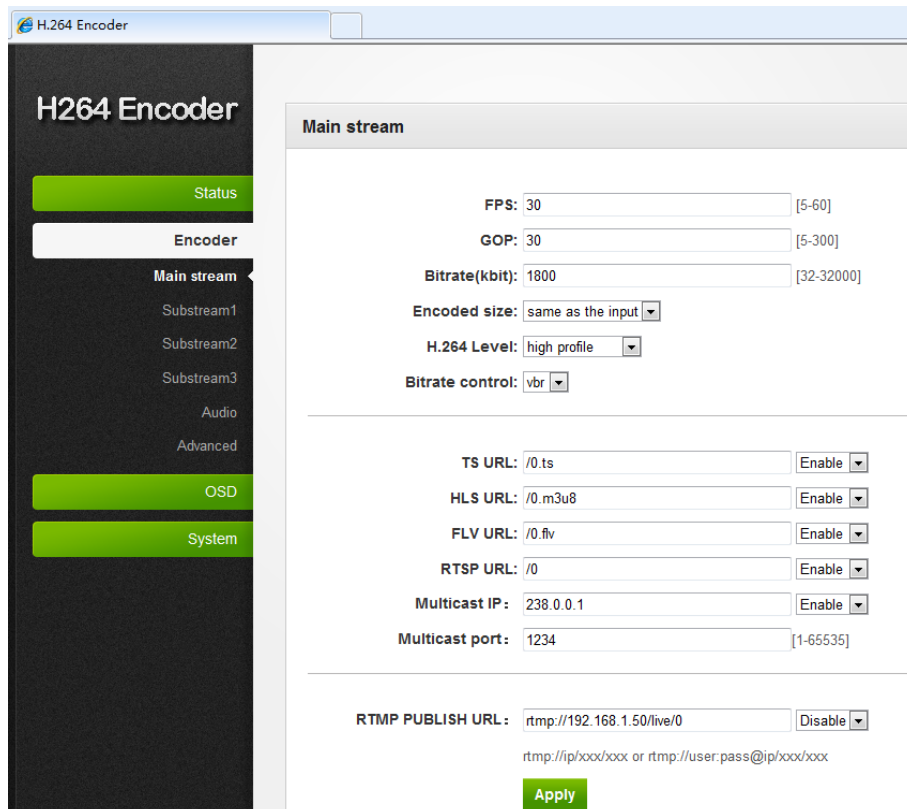

6.2 Audio setting


Click encode→Audio→Setting the parameters→Click apply

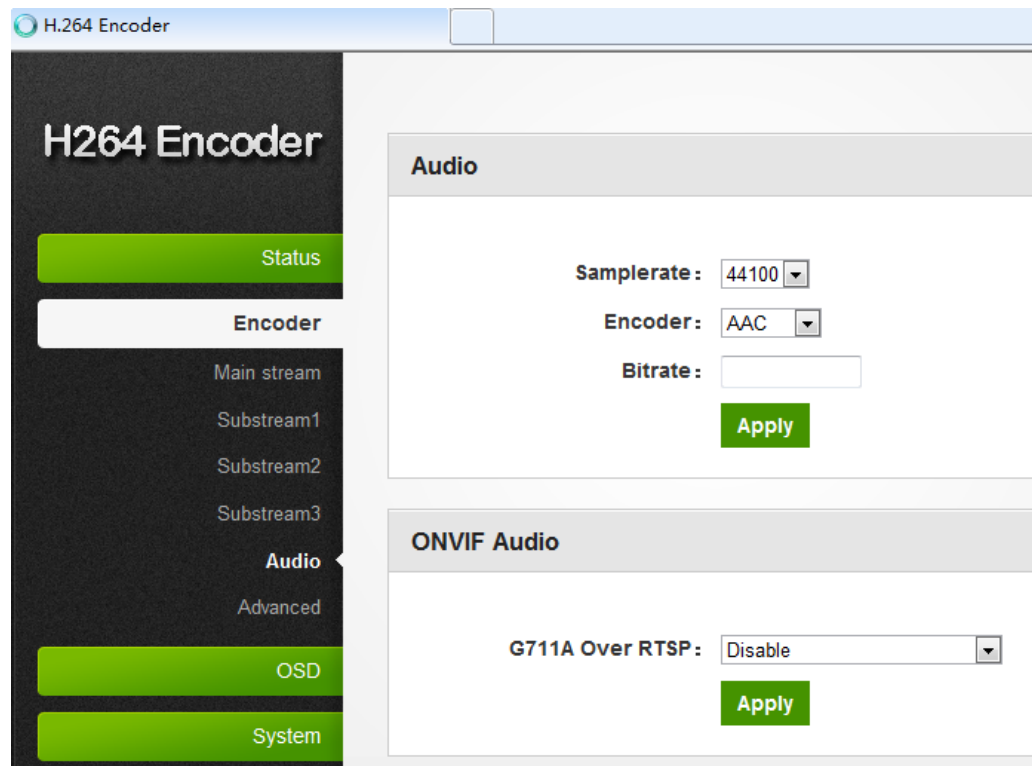

The screenshot shows the 'H.264 Encoder' web interface. On the left is a dark sidebar with a menu: 'Status' (highlighted in green), 'Encoder' (with sub-items: Main stream, Substream1, Substream2, Substream3), 'Audio' (highlighted in white), 'Advanced', 'OSD' (highlighted in green), and 'System' (highlighted in green). The main content area has a light blue header with 'H.264 Encoder' and a search box. Below the header are two sections: 'Audio' and 'ONVIF Audio'. The 'Audio' section contains: 'Samplerate: 44100' (dropdown), 'Encoder: AAC' (dropdown), 'Bitrate: [input field]', and an 'Apply' button. The 'ONVIF Audio' section contains: 'G711A Over RTSP: Disable' (dropdown) and an 'Apply' button.

6.3 Advanced

Click Encoder→Advanced→Setting all the parameter→Click apply.

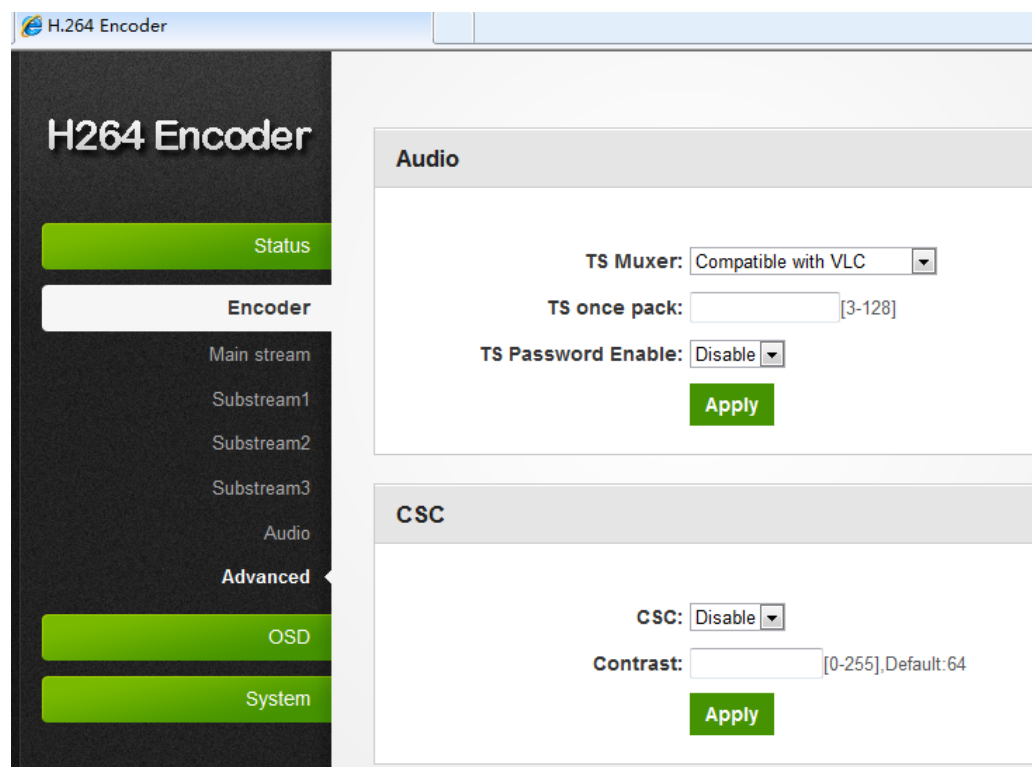


The screenshot shows the 'H.264 Encoder' web interface with the 'Advanced' menu item selected in the sidebar. The main content area has a light blue header with 'H.264 Encoder' and a search box. Below the header are two sections: 'Audio' and 'CSC'. The 'Audio' section contains: 'TS Muxer: Compatible with VLC' (dropdown), 'TS once pack: [input field] [3-128]', 'TS Password Enable: Disable' (dropdown), and an 'Apply' button. The 'CSC' section contains: 'CSC: Disable' (dropdown), 'Contrast: [input field] [0-255], Default: 64', and an 'Apply' button.

7. OSD Setting


7.1 Streaming OSD Setting

Click OSD→Network→Setting all the Parameter→Click apply, as below picture show

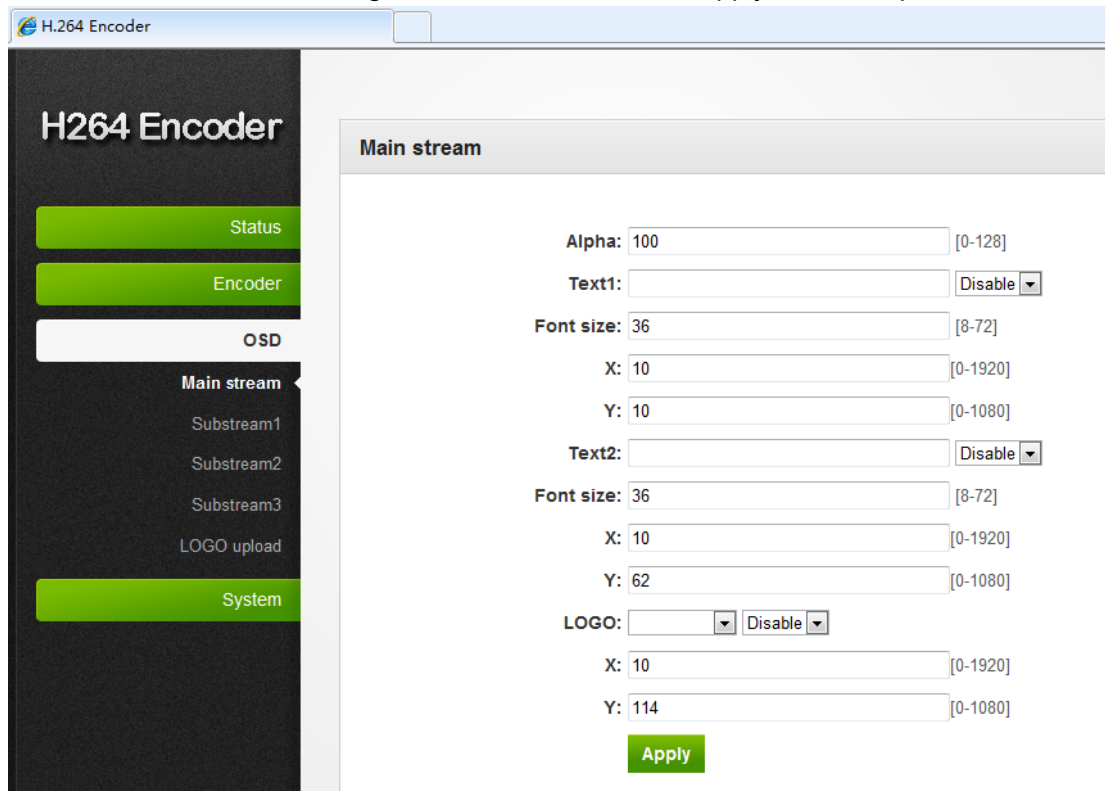

7.2 LOGO uploading

Click logo upload→provide the logo picture as the requirements→Click Apply

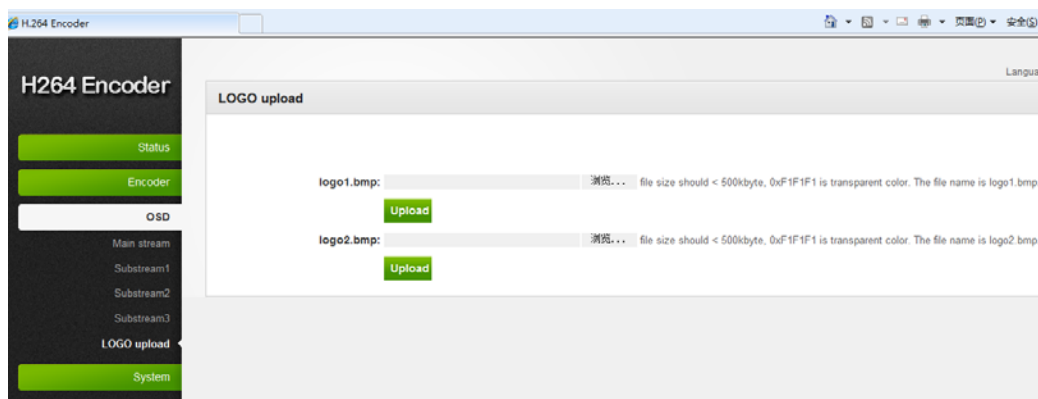

8. System

8.1 Network

Click system→Network→Setting all the parameter→Click apply.

The screenshot shows the H.264 Encoder web interface. The browser title is "H.264 Encoder". The left sidebar contains a menu with the following items: Status, Encoder, OSD, System (highlighted), Network (highlighted), Change Password, Serial to TCP, Upgrade, Reset, and Reboot. The main content area is titled "Network" and contains the following sections:

- internet access**
 - DHCP:
 - IP:
 - Netmask:
 - Gateway:
 - MAC:
- DNS**
 - DNS1:
 - DNS2:
- Port**
 - HTTP Port: [1-65500]
 - RTSP Port: [1-65500]

An **Apply** button is located at the bottom of the form.

8.2 Change password

System→Change password→Set your password→Apply


The screenshot shows the H.264 Encoder web interface. The browser title is "H.264 Encoder". The left sidebar contains a menu with the following items: Status, Encoder, OSD, System (highlighted), Network, Change password (highlighted), Serial to TCP, Upgrade, Reset, and Reboot. The main content area is titled "Change password" and contains the following fields:

- Old password:
- New password:
- Confirm new password:

An **Apply** button is located at the bottom of the form.


8.3 Reset

System→Reset→Reset

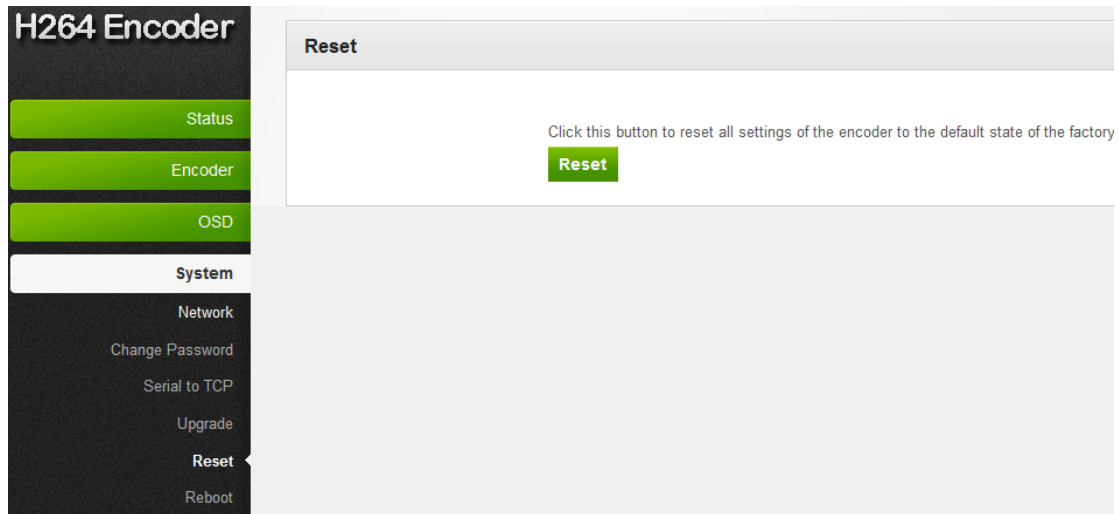

8.4 Reboot

System→Reboot→Reboot (please refresh the web after 1 minute)

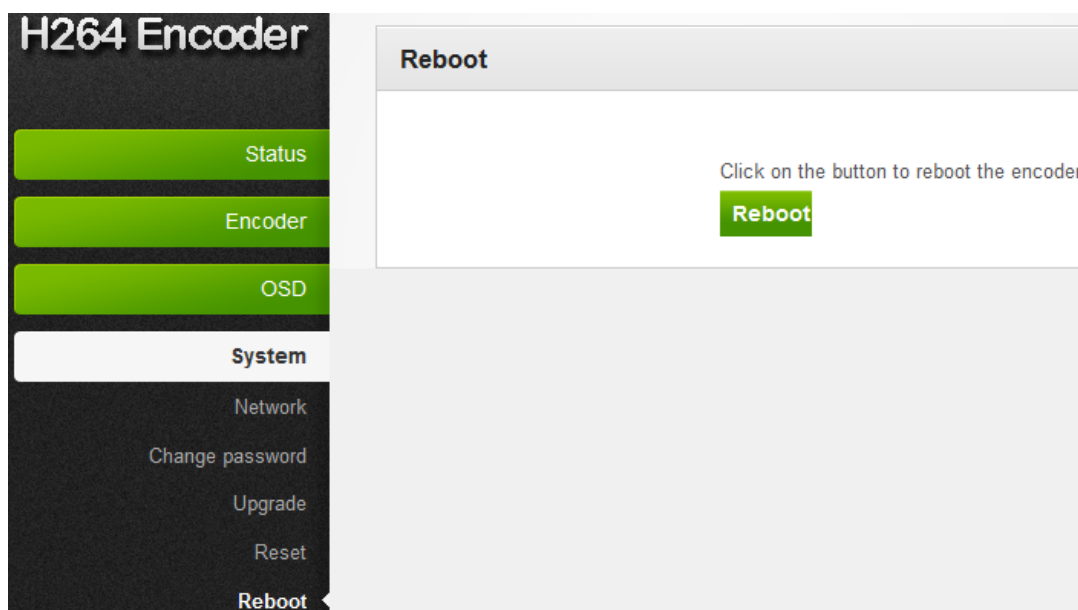


9. Application


9.1 User Application Example

9.1.1 Web Video Preview

Status→Main stream→Preview

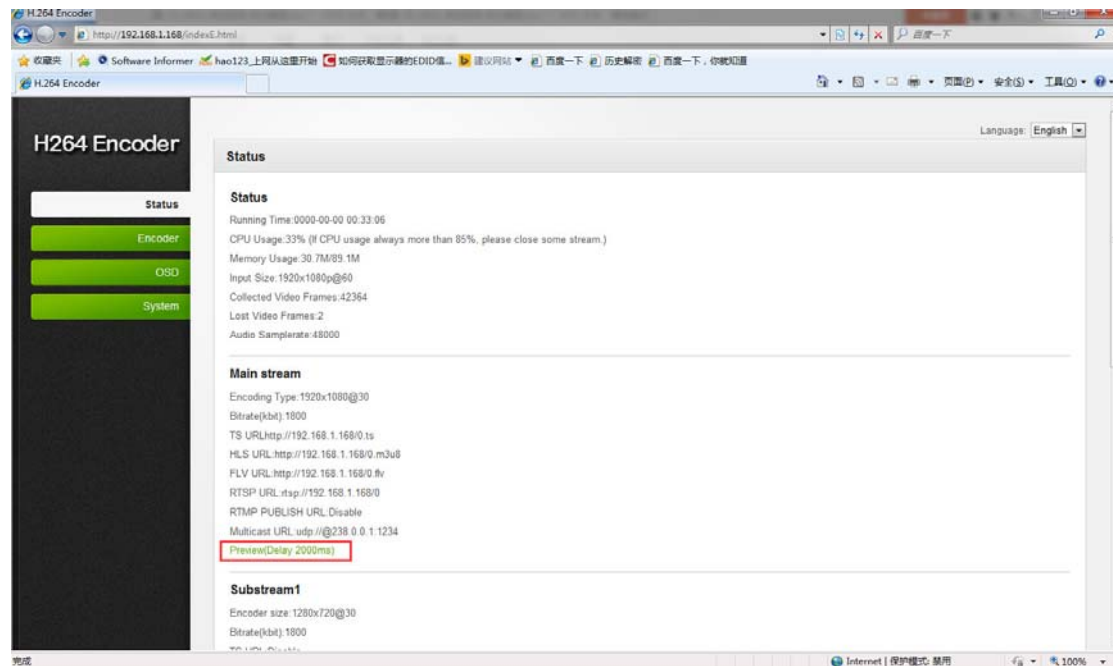


Belowing picture is the preview effect:

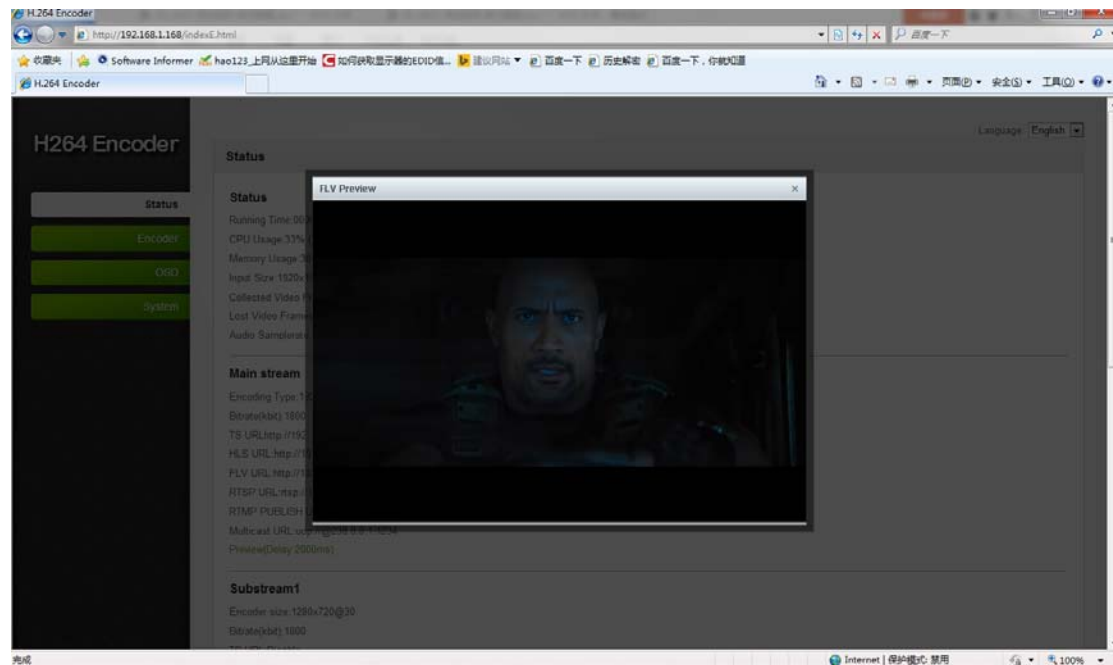


9.1.2 VLC Play

Connect HDMI source to the HD encoder, open VLC media player (Download website: <http://www.videolan.org/>), Click “Media”, then click “Open Network Stream”.

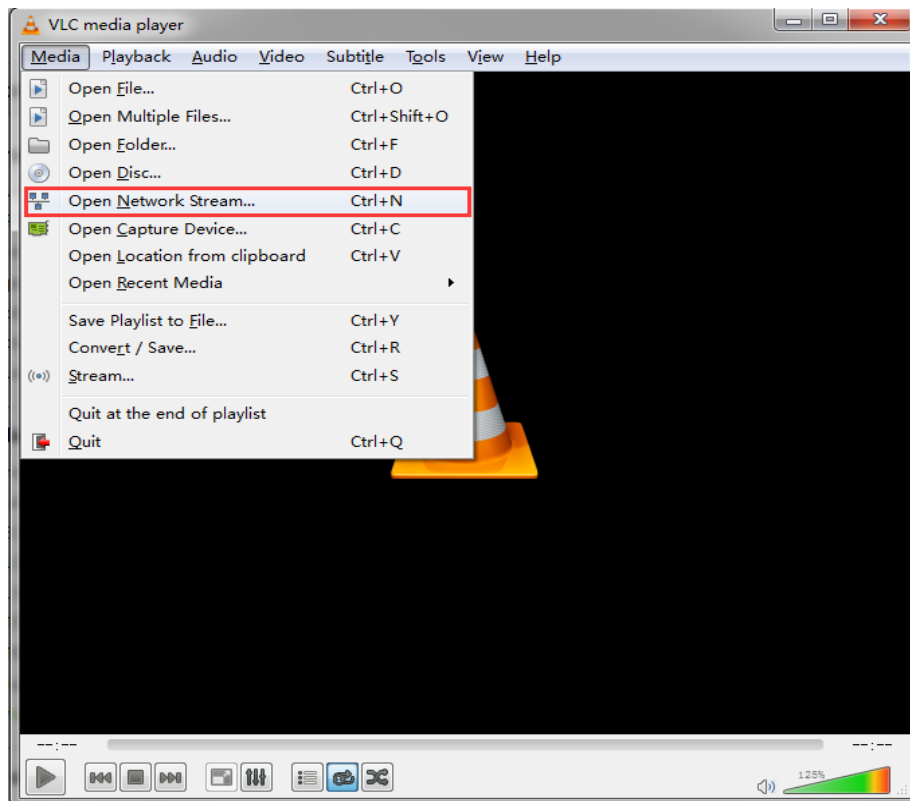

Enter Stream URL which showed from the page of Main stream. Click “play”, You can successfully play the video stream encoded from this device.

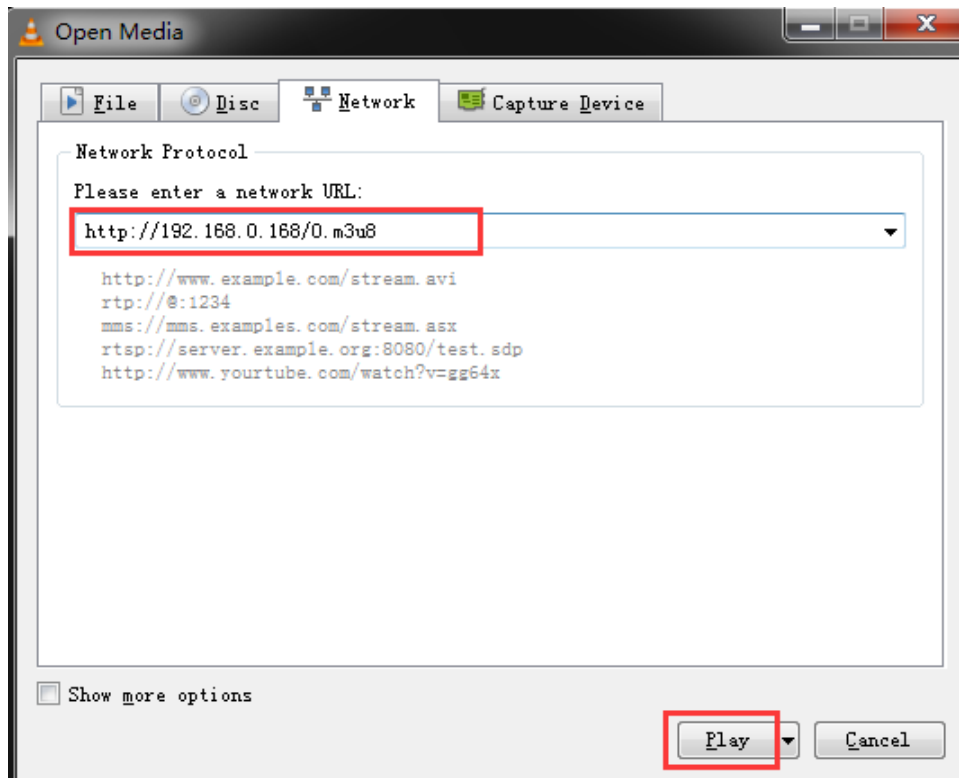



9.2 Multi Local User Application Multicast Way

If many local users need watch the video of same HD encoder at the same time, we suggest using multicast. Enable the multicast IP, then re-power the HD encoder.

H264 Encoder

- Status
- Encoder
- Main stream**
- Substream1
- Substream2
- Substream3
- Audio
- Advanced
- OSD
- System

Main stream

FPS: [5-60]

GOP: [5-300]

Bitrate(kbit): [32-32000]

Encoded size:

H.264 Level:

Bitrate control:

TS URL:

HLS URL:

FLV URL:

RTSP URL:


Multicast IP:

Multicast port: [1-65535]

RTMP PUBLISH URL:


rtmp://ip/xxx/xxx or rtmp://user:pass@ip/xxx/xxx

There is a multicast URL in the Status page, copy it into the VLC Player.
This address can be visited by many visitors at the same time

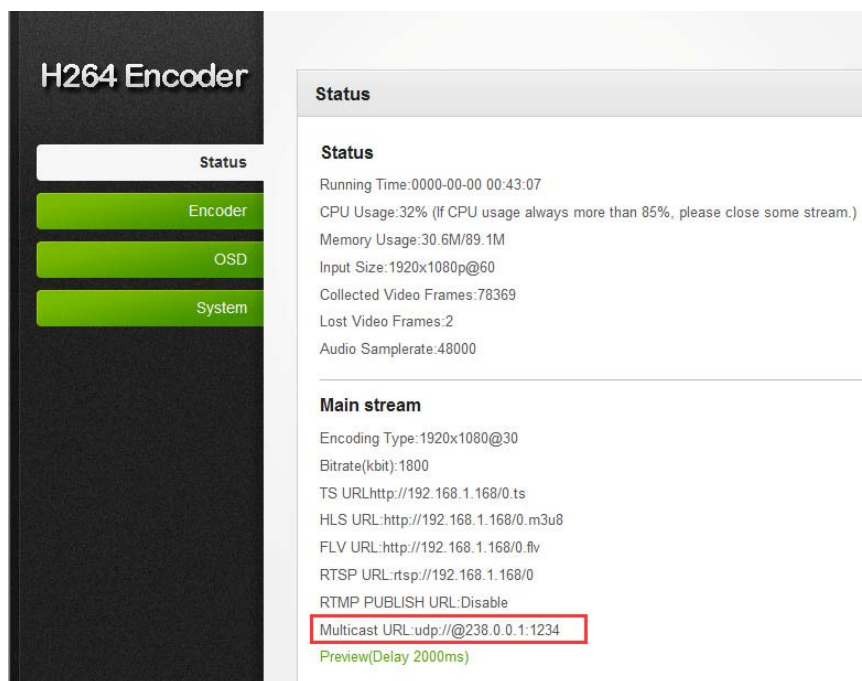


9.3 Local Surveillance System Application NVR Connection

1. Confirm if NVR support H.264 decoder. Since using ONVIF, you need enable the "RTSP" function as below picture.

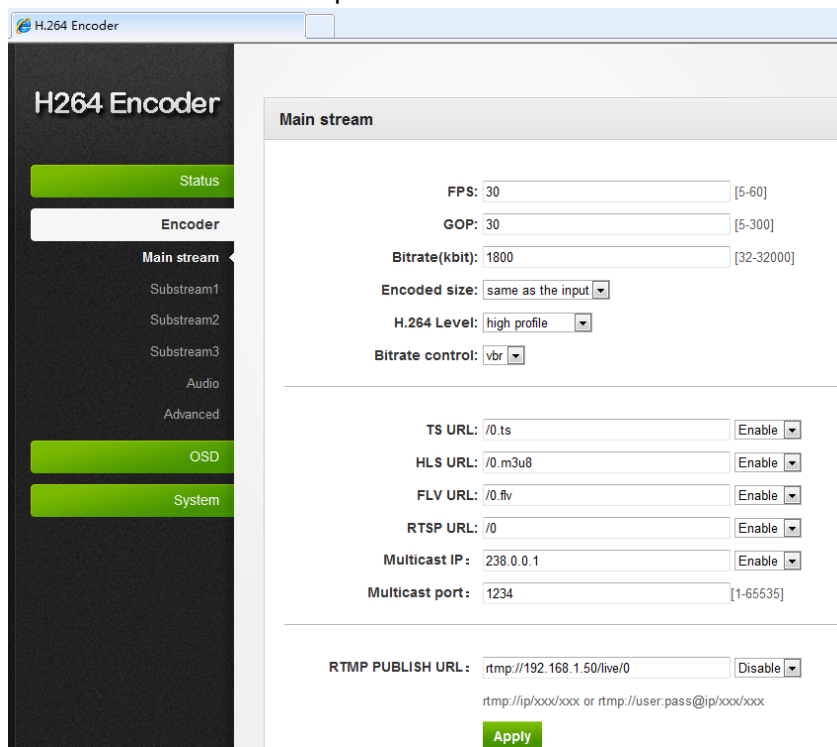

2. If you need the NVR recognize the Audio of HD Encoder, you still need enable the Audio as below picture:

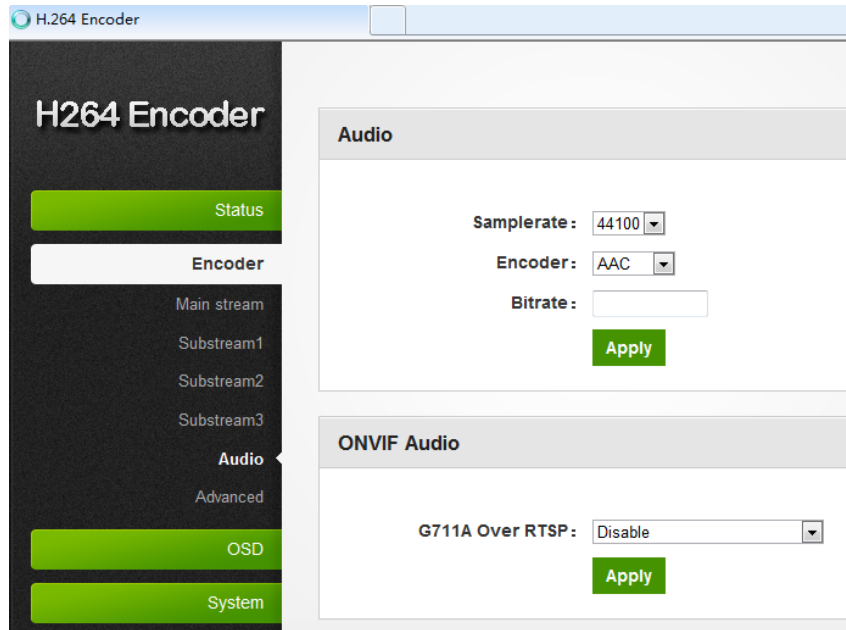

Note: If you've finished above setting and still can't open the video, we suggest you download the standard testing tool to test the ONVIF function of HD Encoder (Download address <http://url.cn/2ESQRcn>)


9.4 Remote Multi User Application RTMP Connection


If many users from different locations need to watch the source of the same HD Encoder, we suggest you use RTMP.

Our product supports the following free platforms: NGINX, RED5 MEDIA SERVER, etc.

Charged platform: ADOBE MEDIA SERVER 5 and <http://mudu.tv/>, etc.


Since the current RTMP protocol only supports H.264, you need to set the HD Encoder as H.264, set the RTMP Address and enable it as shown in the picture. Re-start the HD Encoder after finishing the setting.

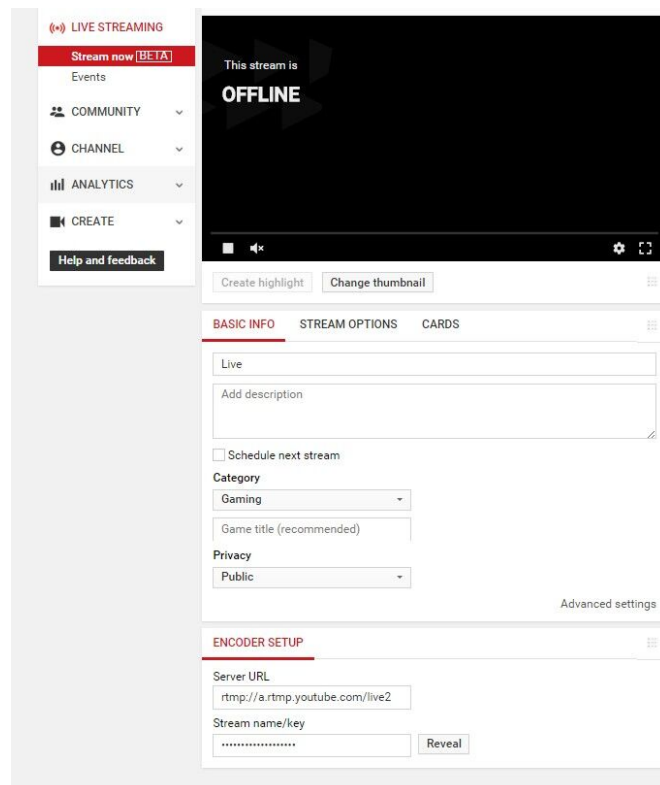

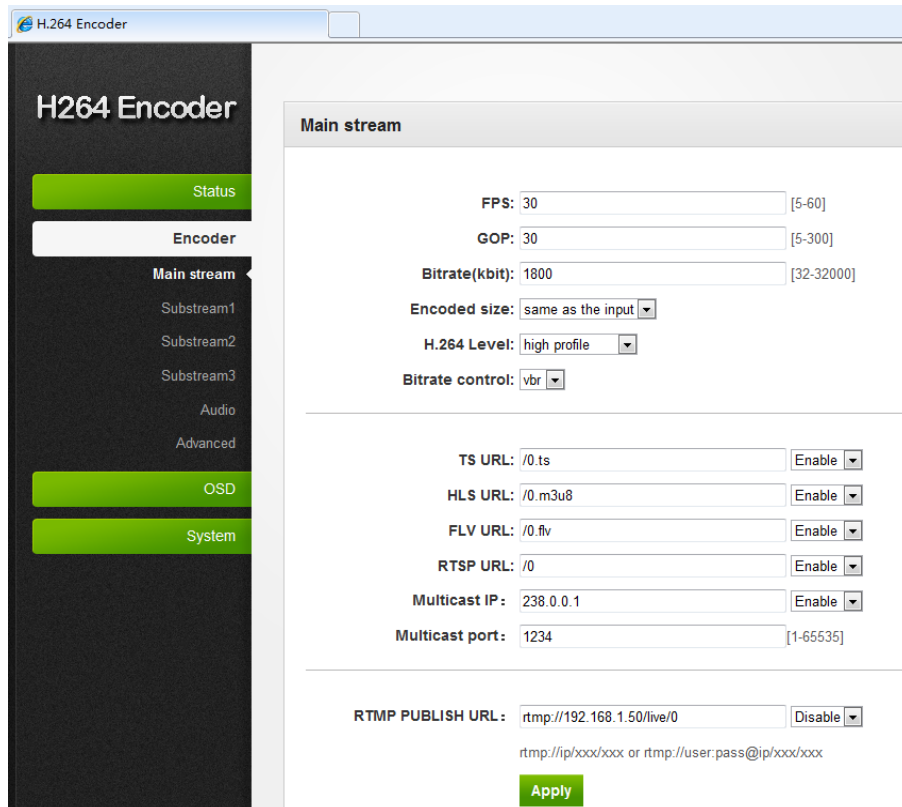

Note: If you have finished above setting and still can't open the video, please check as below:

1. Check the collected data of HD Encoder, if it shows 0, then the HD Encoder connection is failed; you need check if the hardware connection is correct.
2. Check the RTMP connection status, if it shows unconnected, you need check if the Network setting is correct (You need set the IP Address to have access to the internet)

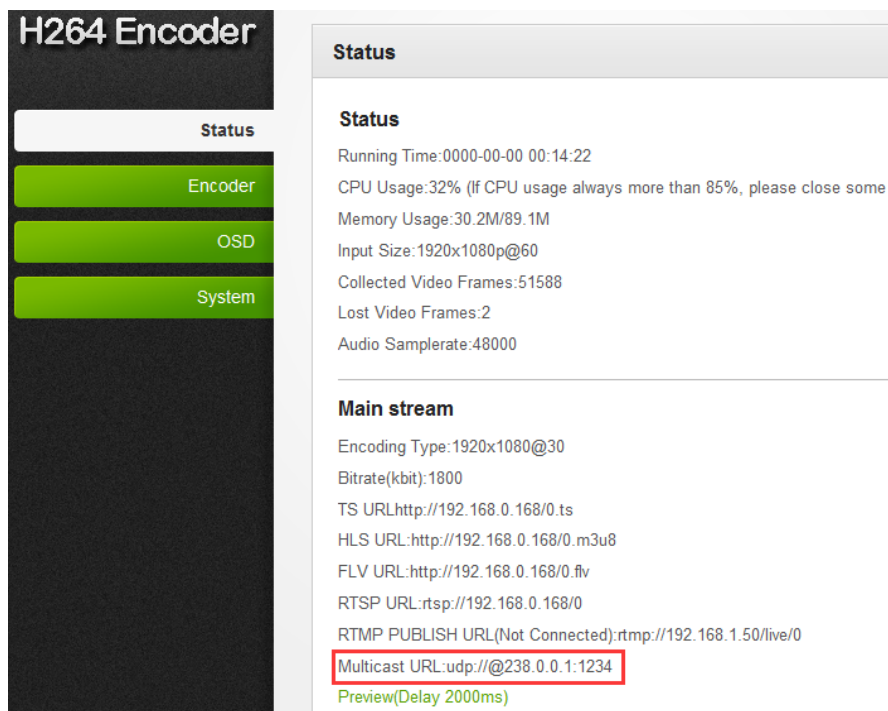

MAINTENANCE

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzene to clean this unit.

PRODUCT SERVICE

1) **Damage requiring service:** The unit should be serviced by qualified service personnel if:

- (a) The DC power supply cord or AC adaptor has been damaged;
- (b) Objects or liquids have gotten into the unit;
- (c) The unit has been exposed to rain;
- (d) The unit does not operate normally or exhibits a marked change in performance;
- (e) The unit has been dropped or the cabinet damaged.

2) **Servicing Personnel:** Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.

3) **Replacement parts:** When parts need replacing ensure the service uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.

4) **Safety check:** After repairs or service, ask the service to perform safety checks to confirm that the unit is in proper working condition.

WARRANTY

If your product does not work properly because of a defect in materials or workmanship, our Company (referred to as "the warrantor") will, for the length of the period indicated as below, (Parts(2)Year, Labor(90) Days) which starts with the date of original purchase ("Limited Warranty period"), at its option either(a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" Limited Warranty period there will be no charge for labor.

During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

MAIL-IN SERVICE

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone and/or email address where you can be reached.

LIMITED WARRANTY LIMITS AND EXCLUSIONS

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage.

The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or service by anyone other than a Factory Service center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable,

travel to and from the service, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive, but are for illustration only.)

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.