

# UHD BOX Play&Back Capture Box

Record Videos and Play Back Instantly

 
 
 
 


# SAFETY PRECAUTIONS

Before using Play Back Box, please ensure that you read and understand the safety precautions below:

1. Do not attempt to open the case of Play Back Box, or modify it in any way, as this will void the warranty.
2. Keep Play Back Box, away from water and other liquids, as this may cause the unit to malfunction.
3. Play Back Box, may become warm during use. This does not indicate malfunction.
4. Do not place heavy objects on Play Back Box, as this may cause the unit to overheat and malfunction.
5. If the exterior of Play Back Box, requires cleaning, wipe it with a soft dry cloth.
6. Do not dispose of the unit via conventional domestic waste.

# BOX CONTENTS

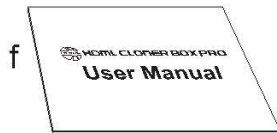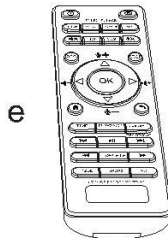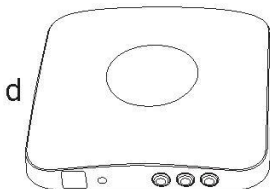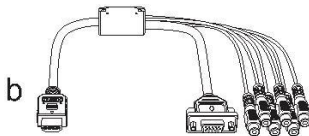

**a. Power Adapter**

 
**e. Remote Control**

**b. MMI Cable**


**d. Play Back Box ,**

**f. User Manual**

# PRODUCT DIAGRAM

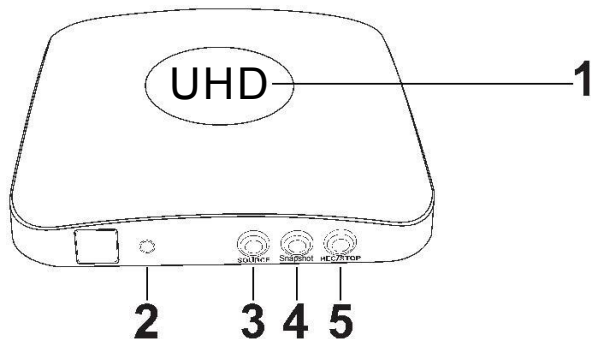

 1. LED indicator light for recording. Blue means **Play Back Box** is recording videos in 1080p, while Green means it is recording videos in 720p or others.
2. When this light is on, it means **Play Back Box** is turned on.
3. SOURCE: Input signal button. HDMI, VGA, YPbPr and AV are available.
4. Snapshot: this button for **capture photo**. (can't capture photo when you using recording videos)
5. REC/STOP: Press this button to start/stop recording.

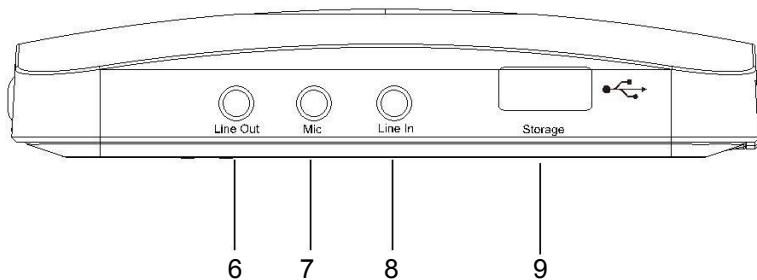


6. Line Out: Audio output interface.

7. MIC: MIC input interface.

8. Line In:input interface.

 9. USB storage: The interface which the USB storage device is plugged into.

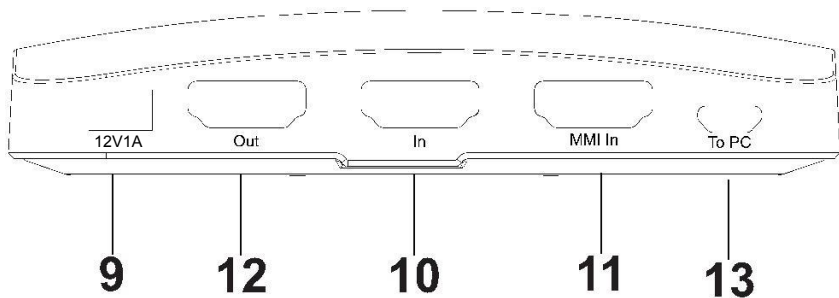

- 9. 12V1A: Power adapter interface.
- 10. HDMI IN: HDMI input interface.
- 11. MMI: VGA/AV/YPbPr cable interface.
- 12. HDMI OUT: HDMI output interface.
- 13. USB to PC: USB interface for connecting the computer.



**REC** : Start recording.

**STOP** : Stop recording

**HDMI** : Select HDMI as the input signal.

**VGA** : Select VGA as the input signal.

**YPbPr** : Select YPbPr as the input signal.

**AV** : Select AV as the input signal.

**Speaker icon with X** : Mute

**4:3** : Switch to the aspect ratio of 4:3.

**16:9** : Switch to the aspect ratio of 16:9.

**Microphone icon with X** : Microphone mute.

**Information icon** : Display information

**Camera icon** : Screenshot

**OK button** : OK button.

**Left and right arrow icons** : Adjust the volume of the source video.

**Up and down arrow icons** : Adjust the volume of MIC input.

**Home icon** : Show the main menu.

**Back icon** : Back to the previous interface.

**TIME** : Set the system time by year, month, day, hour, minute and second.

**PLAYBACK** : Play back the contents in the USB storage device.

**SCHEDULE** : Set the Start Time and Stop Time manually during which videos will be recorded automatically.

**Double left arrow icon** : Back to the previous page.

**Right arrow icon** : Play or stop playing.

**Double right arrow icon** : Go to the next page.

**Fast backward icon** : Fast backward

**DELETE** : Delete the recorded video.

**Fast forward icon** : Fast forward

**720p** : Set the output resolution to 720p.

**1080p** : Set the output resolution to 1080p.

**PC** : Select the output resolution for PC, including 1024\*768, 1280\*800 and 1360\*768.

# HOW TO RECORD VIDEOS TO THE USB STORAGE DEVICE

## 1. Install

(1) Plug the power adapter into the power socket and plug the other end into the 5V/2A port of Playback Box

 
(2) Connect the input device (PS3, PS4, Blu-ray player, etc) to HDMI IN on Playback Box via an HDMI cable.

**Note: If you want to connect devices via the VGA/AV/YPbPr cable, please connect the input device to MMI port on Box .**

(3) Connect Playback Box from HDMI OUT to TV via an HDMI cable.

(4) Plug the USB storage device into the USB port of Playback Box



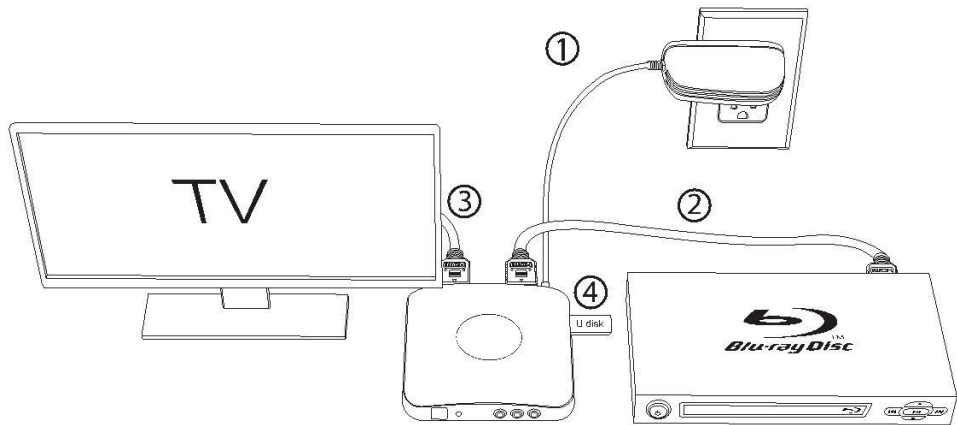

## **2. Record/Capture**

- (1) After all devices are connected properly, please switch on the power of Play Back Box.
- (2) Insert a video disc into the drive of the input device and play the video.
- (3) Plug the USB storage device to the USB port of Play Back Box.
- (4) Press the REC/STOP button on the capture box or press the REC button on the remote control to start recording.
- (5) After recording for a period of time, press the REC/STOP button again on the capture box or press the STOP button on the remote control to stop recording.

 
**NOTE: The recorded video will be split into several 4GB/16GB files.**

**NOTE: Box can also prerecord videos at the scheduled time. After connecting devices properly, follow the steps below:**

- (1) Press the TIME button on the remote control. Set the system time by using the four buttons of volume control on the remote control. After setting, select Confirm and then OK to save the setting.

### 3. Playback

(1) After all devices are connected properly, plug the USB storage device into Box and press the PLAYBACK button on the remote control to enter the playback menu interface.

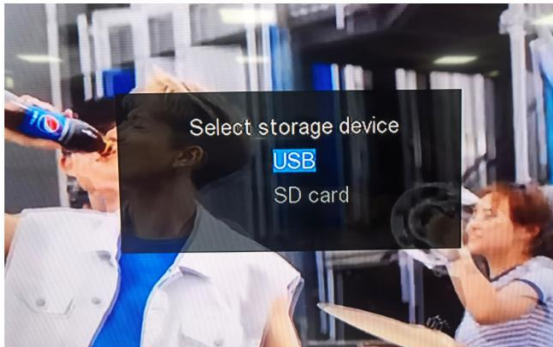

Playback Videos

Playback Pictures

Files

Page 1/5

JPG_0072.jpg	2016-01-21	77KB
JPG_0071.jpg	2016-01-21	77KB
JPG_0070.jpg	2016-01-21	57KB
JPG_0069.jpg	2016-01-21	462KB
JPG_0068.jpg	2016-01-21	577KB
JPG_0067.jpg	2022-12-04	684KB
JPG_0066.jpg	2016-01-21	557KB
JPG_0065.jpg	2022-07-23	536KB
JPG_0064.jpg	2023-02-04	622KB
JPG_0063.jpg	2027-03-13	45KB
JPG_0062.jpg	2023-03-23	495KB
JPG_0061.jpg	2016-01-21	868KB
JPG_0060.jpg	2024-01-13	561KB
JPG_0059.jpg	2022-12-04	512KB
JPG_0058.jpg	2016-01-21	622KB
JPG_0057.jpg	2016-01-21	598KB



Change



Confirm



Close

Disk Usage



14GB/14GB



PLAY


(4) Press




on the remote control to play the selected video(s).



## 4. Setup

 Press  on the remote control to browse the menu settings of Play Back Box, which are TIME, PICTURE, SOUND and OPTION.

Under the TIME column, there are four aspects: System Time, Schedule Recording, Recording Resolution and Software Update.

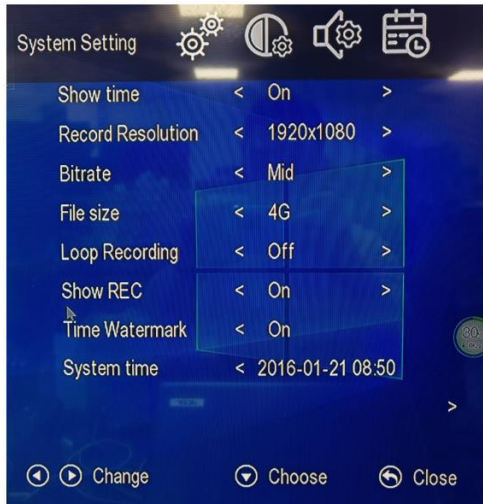


**System Time:** Set the time of Play Back Box. by year, month, day, hour, minute and second.

**Schedule Recording:** Set the Start Time and Stop Time during which videos will be recorded automatically.

**Recording Resolution:** Set the output resolution. High, Middle and Low are available.

 **Software Update:** Upgrade the firmware when there is a new version available. You need to plug the USB storage device into Play Back Box.

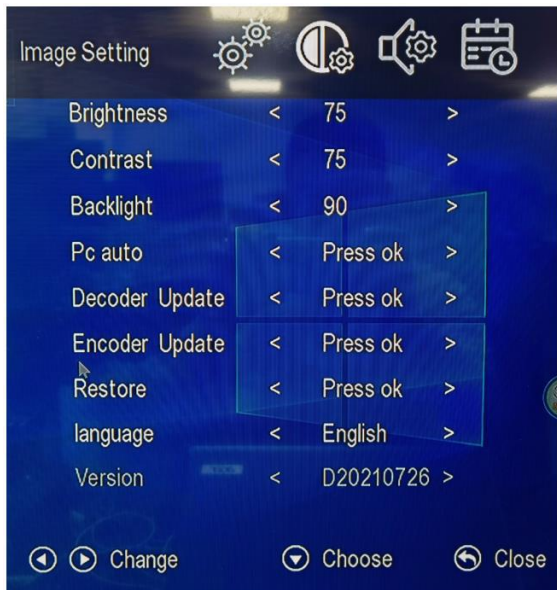

## Audio Setting



HDMI Volume	<	100	>
Mic Volume	<	20	>
Line Volume	<	10	>
Sperker Volume	<	100	>
Line out volume	<	100	>
Line out mixed	<	On	>



Change



Choose



Close



## Schedule Setting



Schedule recorder < Off >

Schedule mode < Once >



Change



Choose



Close

Schedule Setting

Schedule recorder < On >

Schedule mode < Once >

1	2021/05/01 00:00	-	2021/05/01 00:00
2	2021/05/01 00:00	-	2021/05/01 00:00
3	2021/05/01 00:00	-	2021/05/01 00:00
4	2021/05/01 00:00	-	2021/05/01 00:00
5	2021/05/01 00:00	-	2021/05/01 00:00

Change Move Top

Schedule Setting

 
Schedule recorder < On >

Schedule mode < Every day >

1	00:00 -	00:00
2	00:00 -	00:00
3	00:00 -	00:00
4	00:00 -	00:00
5	00:00 -	00:00

Change Move Top

# HOW TO RECORD VIDEOS TO PC

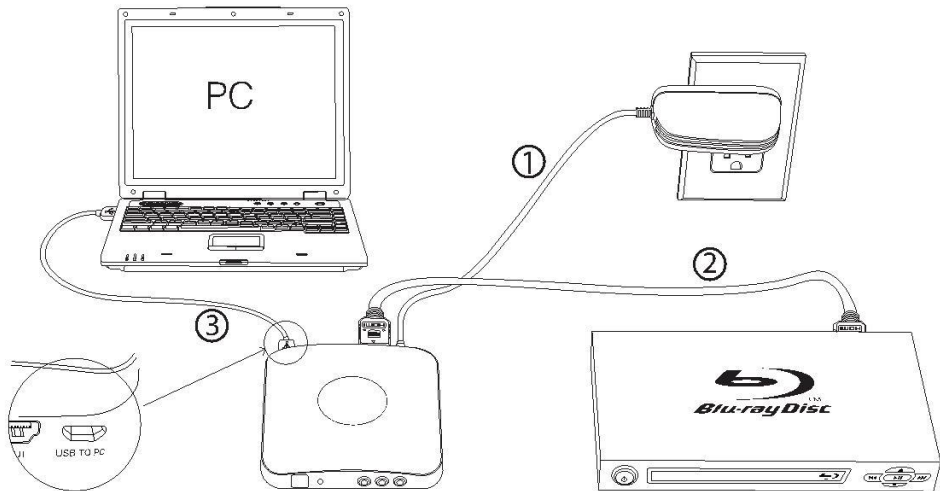

Support: OBS/VLC/AMCAP ETC.

**Video Resolution:** Set the output video resolution. 1080p, 720p and 480p are available.

**Video Bitrate:** 6Mbps, 8Mbps, 10Mbps, 12Mbps, 15Mbps and 18Mbps are available.

**Video Render:** Define the video render. Video Mix Render9 and Internal YUV Render are available.

**Hotkey for Recording:** Set the hotkey for starting and stopping recording videos.

**Language:** Set the language to be displayed on the interface. English, Japanese, Simplified Chinese and Traditional Chinese are available.

**Files Saved to Folder:** Displays the saving path of recorded videos. You can change the saving path by clicking on the folder button.

**Automatically generate the file name when recording starts:** If this option is selected, the titles of recorded videos will be named automatically.

**Set up maximum recording time:** Set the maximum recording time. If the recording time exceeds the set value, Box will stop recording videos.

**OK:** Click to save the settings.


# FREQUENTLY ASKED QUESTIONS

## 1. How to upgrade the firmware of Box?

(1) Download the latest version of the Web Unzip the firmware package and you will get the file.

Copy the file to the USB storage device by inserting it onto the computer.

(2) Plug the USB storage device into Play Back Box

(3) Press  on the remote control and select TIME – Software Update and then press OK.

(4) Select Yes on the pop-up window and then it is in the process of upgrading automatically. When reaching 100%, Play Back Box will reboot and then the upgrade is completed successfully.

## 2. Which file formats are supported for playback?

**Image formats:** JPG

**Audio formats:** MP3, WAV, FLAC, AAC, M4A (AAC encoded)

**Video formats:** MP4, (Video codec: MPEG-2, MPEG-4, H.264, VC-1, HEVC)

**NOTE:** Videos can be played back normally only when the image format, audio format and video format of a video meet the above requirements simultaneously.

# SUPPORTED RESOLUTIONS

Input	4K*2K(3840x2160 30p) 1920x1080 (50p), 1920x1080 (60p), 1920x1080 (24p) 1920x1080 (25p), 1920x1080 (30p), 1920x1080 (50i) 1920x1080 (60i), 1360x768 (60p) 1280x1024 (60p), 1280x720 (60p), 1280x768 (60p) 1280x800 (60p), 1024x768 (60p) 720x480 (60i), 720x480 (50i), 640x480 (60p) 720x480 (60p), 720x576 (50p)
Output	1920x1080 (60p)
Recording	1920x1080 (60p) 1280x720 (60p) 1024x768 (60p) 1280x1024 (60p)
PC Recording	1920x1080 (30p)

# PRODUCT SPECIFICATIONS

Output format	MP4 (H.264)
Video standards (input)	NTSC, PAL, PAL-60
Supported recording formats	FAT32 NTFS exfat.MBR.GPT
Input signals	HDMI, VGA, YPbPr, AV Audio L/R, MIC, Line In/Out
Output signals	HDMI (pass-through), USB, Micro USB to PC
Bitrate	Max: 18Mbps
Recording capacity	Maximum 4GB/16GB per file
Maximum storage capacity	8TB
Power supply	DC 12V1A
Weight	7.1 oz
Dimensions	4.3 x 4.3 x 0.6 inches
Supported file formats for playback	<b>Image formats:</b> BMP, JPG, PNG <b>Audio formats:</b> MP3, WAV, FLAC, AAC, M4A (AAC encoded) <b>Video formats:</b> MP4, (Video codec: MPEG-2, MPEG-4, H.264, VC-1, HEVC)

**NOTE: Videos can be played back normally only when the image format, audio format and video format of a video meet the above requirements simultaneously.**