



IR D7 User Manual

Front side View :

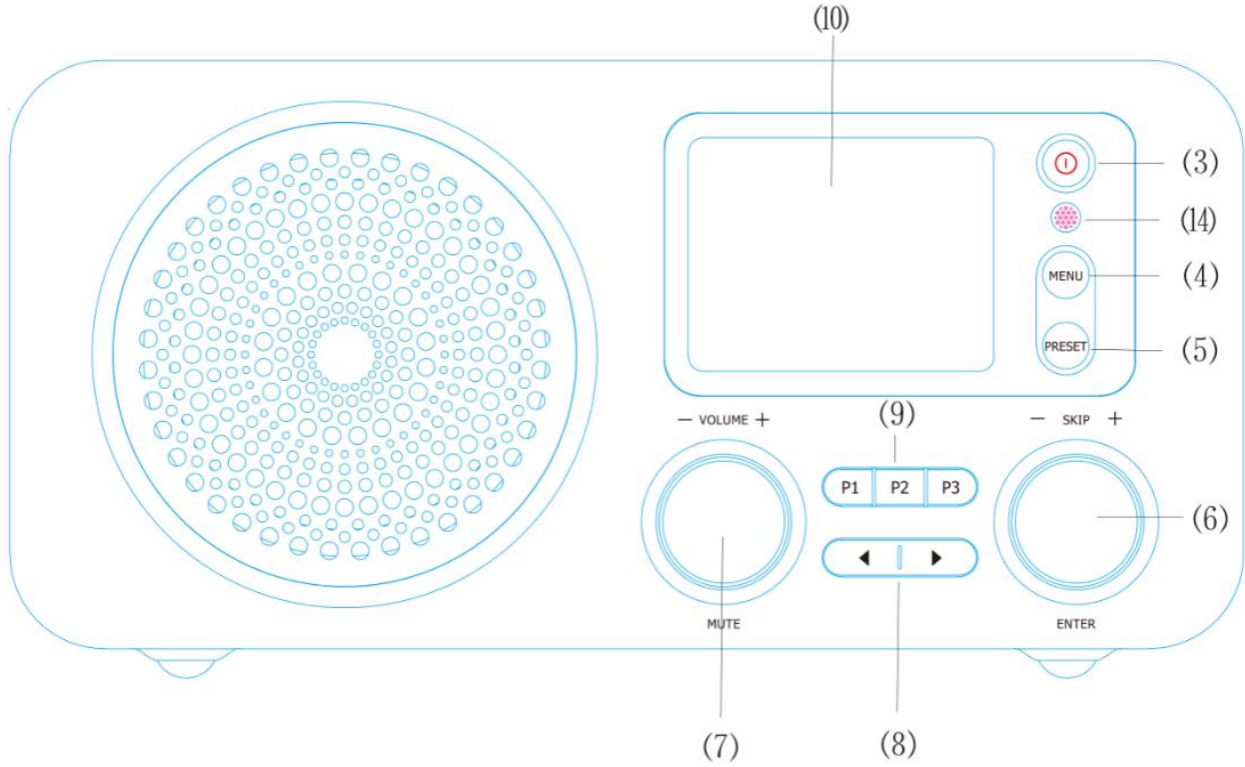

Back side View :

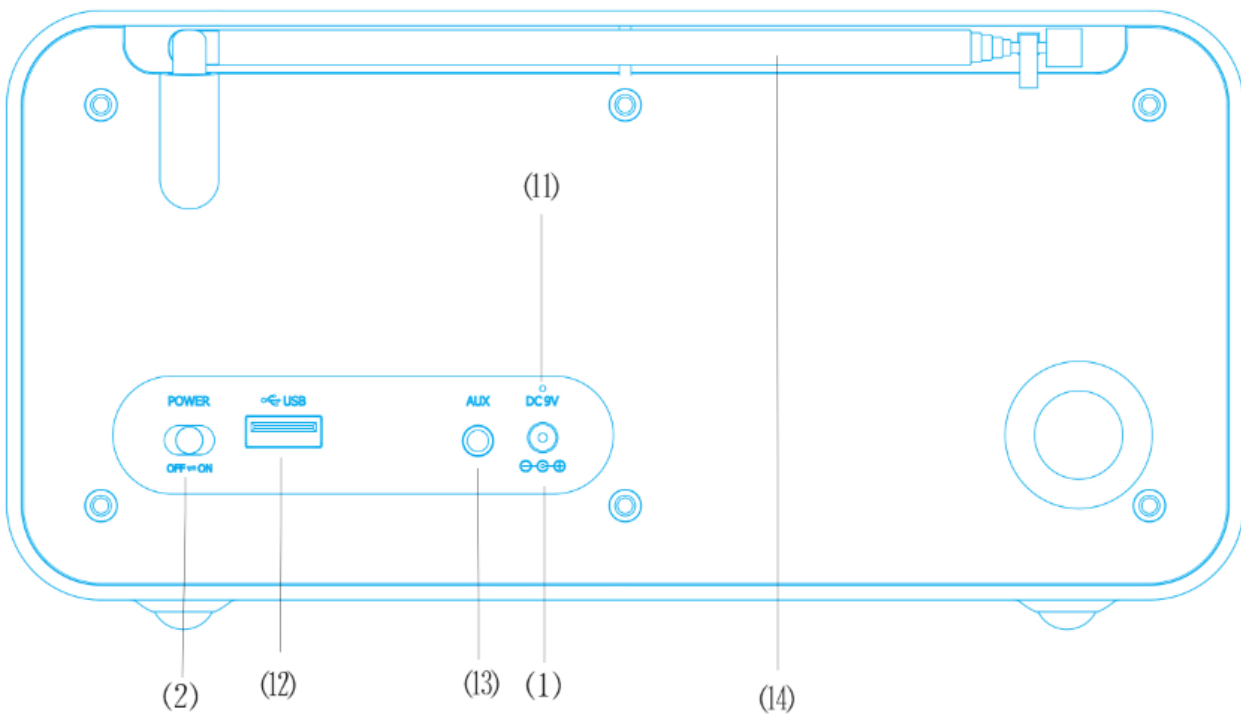

- (1) - **Power input port**
- (2) - **Power ON/OFF switch:** Move ON/OFF button to ON/OFF side to power on/off the device.
- (3) - **Turn ON/OFF (standby):** Press this button to turn on the device or turn off (enter into standby) the device.
- (4) - **MENU button:** Press MENU button to enter Main menu.
- (5) - **PRESET button:** Short press PRESET button to go favorite list. Long press PRESET button to preset the favorite list.
- (6) - **SKIP knob / ENTER button :** Turn skip knob to go up/down or previous/next; Press ENTER button to enter submenu or to confirm setting.
- (7) - **VOLUME knob / MUTE button :** Turn volume knob to adjust the volume; Press MUTE button to mute the voice.
- (8) - **◀▶ button:** Press ▶ to go previous/next or up/down ; Press ◀ to return , press ▶ to input the words; Press ◀▶ button to zoom in and out the pictures.
- (9) - **Shortcut key P1/P2/P3:** Press P1/P2/P3 key to go your preset list P1/P2/P3 directly.
- (10) - **LCD display**
- (11) - **Power LED indicator**
- (12) - **USB port**
- (13) - **AUX in port**
- (14) - **Infrared Receiving Window**

Power Supply:

Use supplied AC adaptor (9V/1.3A) to connect the device IR D7 with electrical socket to supply power.

Power ON/OFF

Move the Power switch to ON/OFF side to power on/off the device.

First time to power on the device, please turn the Skip knob to select system language, and press Enter button to confirm.

WIFI Connection

A-- First time to connect Wifi

- 1, When the device is powered on, select language and press **ENTER** button to confirm.
 - When it comes to "Enable 'Check Network when Power on' ". Turn **SKIP** knob(or press ◀▶) and select "YES". Then press **ENTER** button ,
 - It will shows "Would you like to configure Network now ?" on display. Select "Yes" and press **ENTER** button to scan for available networks. Turn **SKIP** knob to select available WIFI name and press **ENTER** button to enter the password input interface.
- 2, How to input the password :
 - Turn the **SKIP** knob to look up the letters/special characters/numbers, press ▶ button to confirm and go to next word input. when input the last password, please press **ENTER** button to confirm.
- 3, Once Wifi connection is successful , it will enter into Main Menu.

B -- Change Wifi Connection / Or re-connect Wifi

- 1, Press **MENU** button to enter "Main menu", turn **SKIP** knob to select "configuration" and press **ENTER** button

to enter submenu.

- 2, Turn **SKIP** knob to select “Network” and press **ENTER** button to enter “Network” submenu, enter “Wireless Network configuration” → “Enable”, press **ENTER** button to start available networks scanning.
- 3, Select your available WIFI name and input the passwords.

Internet Radio

- 1, When Wifi connection is successful, enter “Internet Radio” submenu → “Radio Station/Music” submenu, turn **SKIP** knob to select and enjoy the available radio on the internet.
- 2, Short press ◀▶ button to zoom in and out the pictures.
- 3, Long press “PRESET” button to preset current radio station as your favorite radio, turn **SKIP** knob to set the station list number you want and press **ENTER** button to confirm.
- 4, Short press “PRESET” button to go to your favorite radio station list.

FM Radio

- 1, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select FM and press ENTER button.
- 2, Auto Scan: Press **ENTER** button, it shows “Auto Scan ?”on display; Select “yes” and press ENTER button to start automatic searching , the available FM radio channels will be stored after automatic searching.
- 3, Long press ◀▶ to go previous/next channels.
- 4, Short press ◀▶(or Turn **SKIP** knob) to adjust radio frequency 0.05MHz each time.
- 5, Long press “PRESET” button to preset current radio channel as your favorite radio,turn **SKIP** button to set the radio channel list number you want and press **ENTER** button to confirm.
- 6, Short press “PRESET” button to go to your favorite radio channel list.

DAB/DAB+ Radio

- 1, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “DAB/DAB+” and press **ENTER** button to start automatic searching.
- 2, The available DAB/DAB+ radio stations will be stored after automatic searching.Turn **SKIP** knob to select Radio stations , press **ENTER** button to confirm.
- 3, Long press “PRESET” button to preset current DAB/DAB+ radio station as your favorite radio,turn **SKIP** knob to set the DAB/DAB+ radio channel list number you want and press **ENTER** button to confirm.
- 4, Short press “PRESET” button to go to your favorite DAB/DAB+ radio stations list.

Bluetooth music play

- 1, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “Bluetooth” and press **ENTER** button.
- 2, Use your Bluetooth enabled device (such as iPhone /iPad...), turn on the Bluetooth function, and search for “**IRD7**”

and click it to connect.

- 3, Once connect successfully, it will show “Bluetooth Connected” on display.
- 4, Short Press **ENTER** button to play or pause the music. Turn the SKIP knob to go previous or next songs.
- 5, Long press **ENTER** button to disconnect Bluetooth, Long press **ENTER** button again to reconnect Bluetooth.
- 6, The device will search associated picture on internet for the song which is playing. Short press ◀▶ button to zoom in and out the picture.

USB music play

- 1, Insert USB flash drive, it will show USB connect symbol on top right side of display.
- 2, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “Media Center” and press **ENTER** button. Select “USB” and press **ENTER** button.
- 3, Turn SKIP knob to select the songs from USB and press **ENTER** button to play.
- 4, Press ▶ button to select if delete the song. Press ◀ button, back to superior menu.
- 5, Short Press **ENTER** button to play or pause the music.

AUX music play

- 1, Connect the device and your smart phone or MP3 player via 3.5mm Aux cable.
- 2, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “AUX” , then press **ENTER** button to confirm.
- 3, Play music from your smart phone or M3 player via the device IRD7.

Date&Time Setting

A- Under WIFI connection, the device will automatically synchronize the local time.

B- Manual clock setting :

- 1, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “configuration” and press **ENTER** button.
- 2, Turn SKIP knob to select “Date&Time” , then press **ENTER** button and turn **SKIP** knob to select “Set Date and Time”. Press **ENTER** button→ select “Manual Setup”and press **ENTER** button→Enter into “Set Date and Time” interface.
- 3, Turn SKIP knob to adjust the numbers , Press ▶ button to confirm and go to month/year/minutes/hours setting. Then Press **ENTER** button to confirm Date&Time setting.
- 4, Press MENU button to return Main menu.

Alarm clock Setting

This device can set 2 sets of alarms, operation as below:

- 1, Press MENU button to enter Main menu , then turn **SKIP** knob (or press ◀▶) to select “configuration” and press **ENTER** button.
- 2, Turn SKIP knob to select “Alarm” , then press **ENTER** button to enter Alarm setting.
- 3, Turn SKIP knob to select Alarm 1 / Alarm 2 / NAP Alarm / Alarm Volume.
For Alarm 1 / Alarm 2, you can set different Repeat days and different Alarm sound.

Enter Repeat submenu : Everyday/Once/Mon/Tue/Wed/Thu/Fri/Sat/Sun

Enter Sound submenu : Beep/Melody/Internet Radio/FM/DAB/DAB+/USB

- 4, Press ENTER button to confirm Alarm setting , and press MENU button to return Main menu.
- 5, When the alarm clock rings, press any other button (except Standby button) to activate snooze function. After 5 min, the alarm clock will go off again.
- 6, Press Standby button to shut down the Alarm clock.

Sleep Timer Setting

- 1, Press MENU button to enter Main menu ,then turn **SKIP** knob (or press ◀▶) to select “configuration” and press ENTER button.
- 2, Turn SKIP knob to select “Sleep Timer” and press ENTER button to enter Sleep timer setting.
- 3, Turn SKIP knob to select 15Minutes/30Minutes/60Minutes/90Minutes/120Minutes/150Minutes/180Minutes and press ENTER button to confirm. The device will be automatically turn off after 15Minutes/30Minutes/60Minutes /90Minutes/120Minutes/150Minutes/180Minutes
(If select “Turn Off” and press ENTER button, the device will be turned off , and enter into standby)
- 4, Press ENTER button to confirm, then press MENU button to return Main menu.

LCD Display Brightness Adjustment

- 1, Press MENU button to enter Main menu ,then turn SKIP knob to select “configuration” and press ENTER button.
- 2, Turn SKIP knob to select “**Dimmer**” and press ENTER button to enter display brightness setting.
- 3, Select “Turn on” and press ENTER button → Turn SKIP knob to adjust the display brightness.
- 4, Press ENTER button to confirm, then press MENU button to return Main menu.

Technical Specifications :	
Output power :	RMS 5W
S/N ratio :	≥70dBA
Distortion :	≤1%
Frequency Response :	120Hz~18KHz
Driver unit :	Φ3 inch / 4Ω
Power supply :	AC adaptor 9V/1.3A
Compatible with :	UPnP multimedia server
Working Temperature :	0°C~50°C
Unit size :	210mm (W) *100mm (H) *105mm (D)

Packing List:

1x Internet Radio Speaker IRD7

1x AC adaptor

1x 3.5mm Aux cable

1x User Manual